


RedBox3 View



Disp Switch for communication configuration.

Rotary Switch for CNC type selection.


Redbox3 Dip Switch for communication configuration.

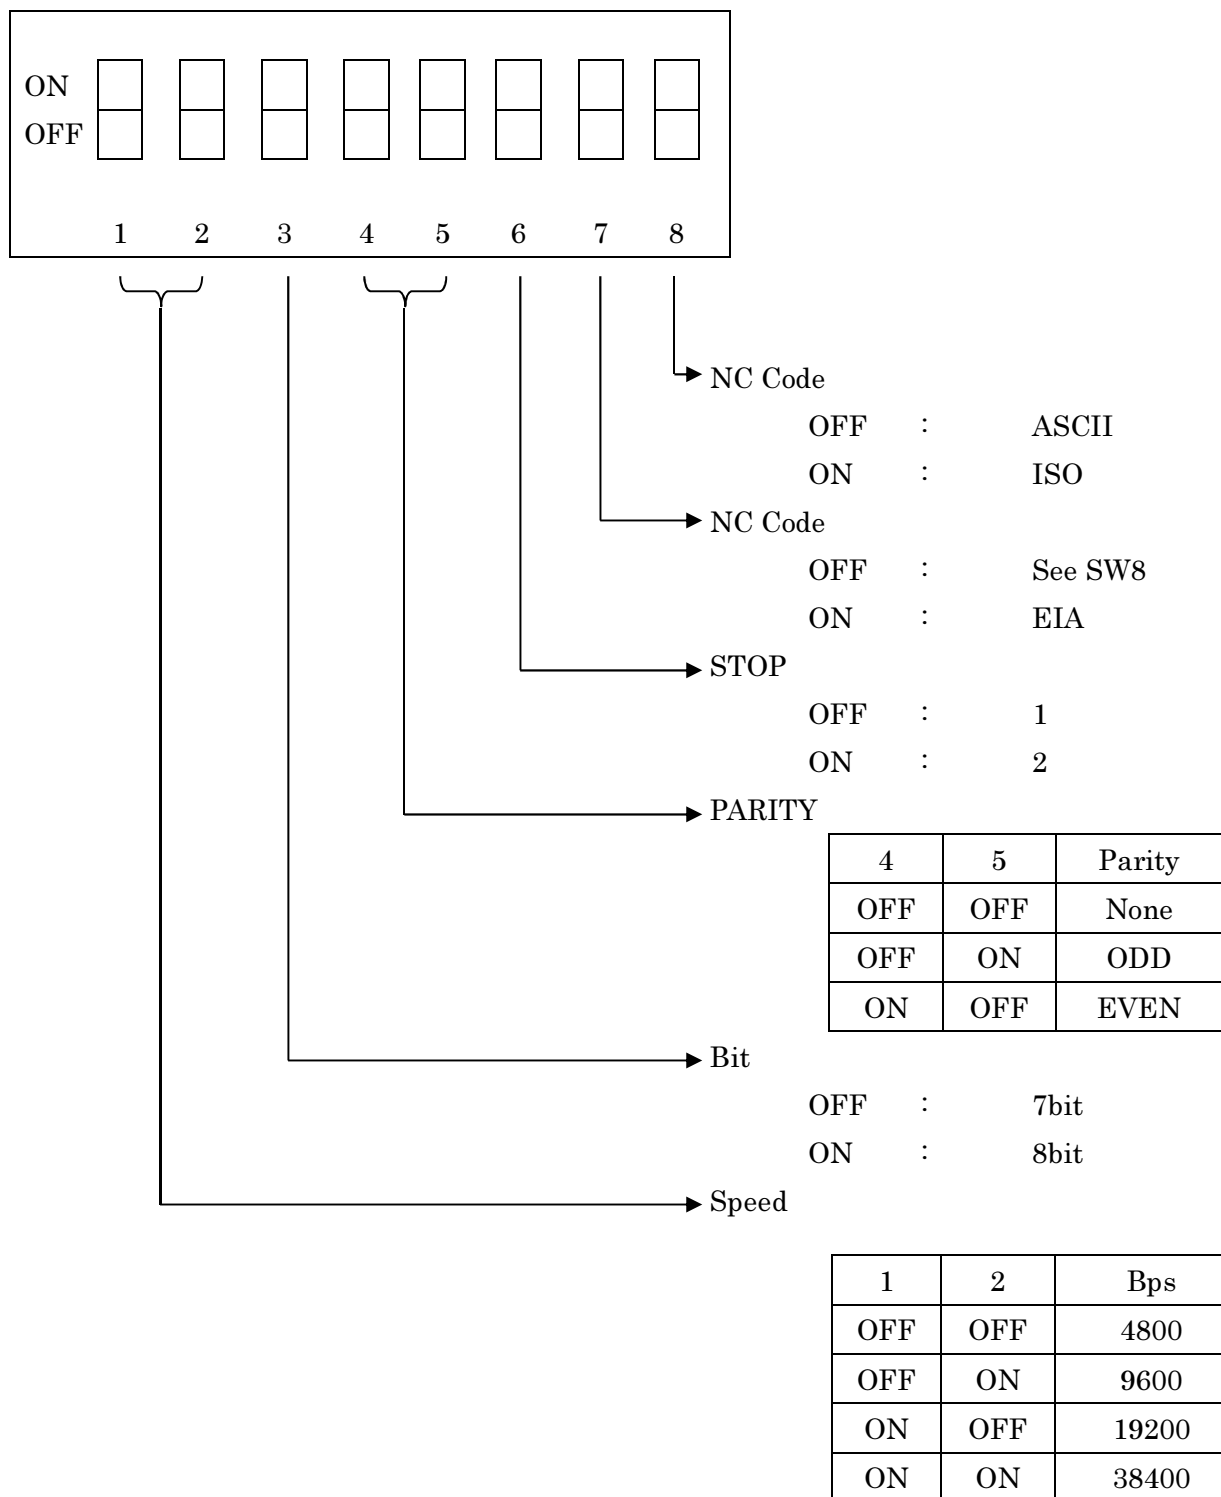

Redbox3 Rotary Switch Configuration.

0	:	FANUC
1	:	Fadal Original Mode(Remote command available)
2	:	Fadal FORMAT2 (Similar to FANUC)
3	:	OSP
4	:	OSP download ends with %%

Redbox3 LEDs

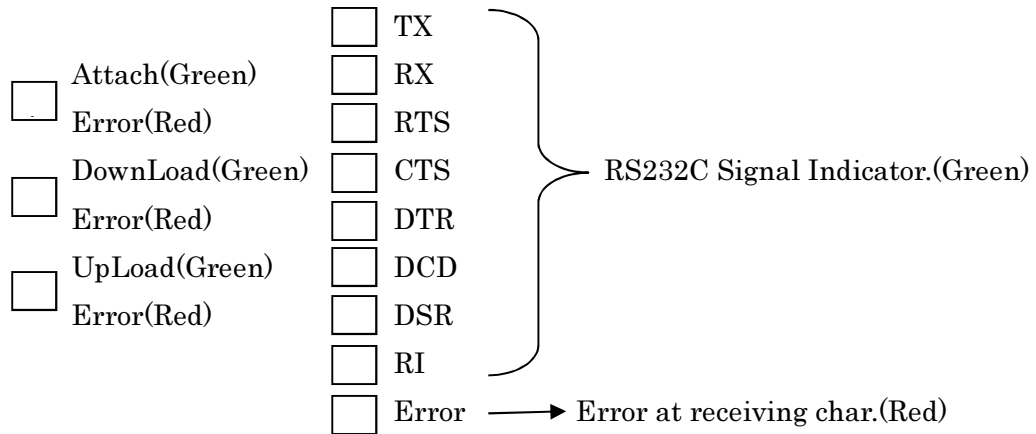

Attach/Error

Attach	USB Memory attach indicator.
Error	USB Memory attach error.

DownLoad/Error

DownLoad	Download ready from USB indicator.
Error	Download error from USB indicator.

UpLoad/Error

UpLoad	Upload success to USB indicator.
Error	Upload error to USB indicator.

Note.

If RS232C Error is turned on,
It means, communication configuration doesn't match with your CNC.